

1. Software Installation

Insert the CD and follow the on-screen instructions.



2. Configure Logger

Plug the logging module into your computer's USB port and use the **Start Logger** option to set the sampling rate.



3. Start Logging

Unplug the logging module from the computer and plug it into the top of the *NoiseSign*. Ensure that the *NoiseSign* has power and leave it to start logging.



www.noisemeters.com www.noisemeters.co.uk www.noisemeters.eu

NoiseSign

Noise Activated Warning Sign



NoiseMeters