

NoiseMeters Applications for the CEL242 and CEL246 Sound Level Meter

1 Login In using your username and password

Noise Applications

Our web based Noise Applications run in your web browser (Explorer, Firefox, Safari, etc.), producing noise reports from measurements made with the CEL620 series and CEL24x series sound level meters.

Reports can be sent to your printer or saved for future reference. You can even download the analysis results and reports into Excel or similar spreadsheet.

These applications can be bought from NoiseMeters along with a CEL620A, CEL620B, CEL242 or CEL246 Sound Level Meter. If you already have a compatible meter then you can still buy this application and register your meter.

Connect the meter to your USB port and download the measurements

2 Select Transfer Measurements

NoiseMeters Applications User: mike Logout

Home Transfer Reports Settings

Reports

Occupational Noise NRNC Curves

System

Transfer Measurements Settings

Contact NoiseMeters © NoiseMeters Limited 2015

3 Select Meter Type

NoiseMeters Applications User: mike Logout

Home Transfer Reports Settings

Transfer Measurements

Meter Type: CEL24x CEL62x

Transferring measurements from the meter to the host

SELECT FILES

Windows Sync Program

Rather than uploading through your browser (and having to find the files on the meter) you can download our NoiseMeters Applications Sync program.

- Windows application
- Detects meter connection
- Finds new measurements
- Transfers to NoiseMeters Apps

Download NoiseMeters Applications Sync


Help Transferring Measurements

Connect the sound level meter to the computer's USB port



Wait a few seconds while Windows sees the meter and connects up.
A window may appear asking what you want to do with the data - just

When you click the **Select Files** button above, your browser will display a standard window in which you can select the files to transfer.

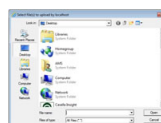


The sound level meter will be visible as a drive, usually drive D:, E: or F:

It will be identified as CEL-620x and the drive letter


Select the measurements you want to transfer. Holding **Shift** or **Ctrl** at the same time as clicking a measurement will allow you to select multiple ones.

NoiseMeters Applications for the CEL242 and CEL246 Sound Level Meter

If this is the first time you have used NMAApps with the CEL242 or CEL246 you will need to download the 'NoiseMeters Applications Sync' program from the following link

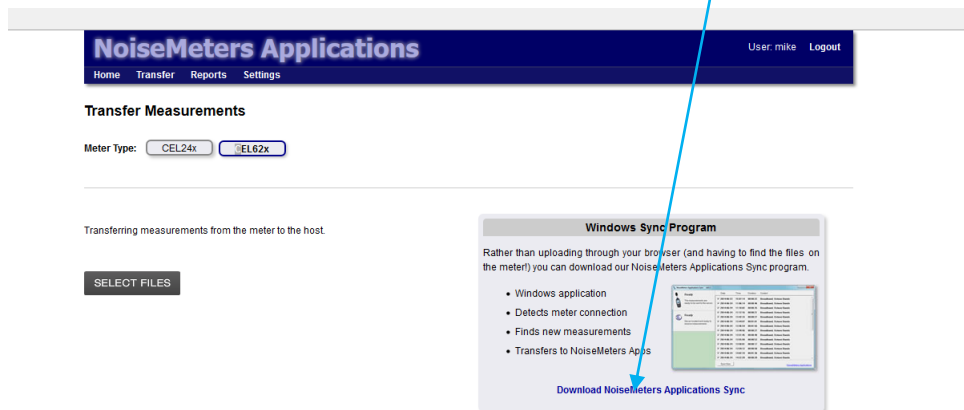

When starting the download 'NoiseMeters Applications Sync' program you will get the following screen. Please read the information regarding the Windows 8 message and Windows 7 and Windows 8. (Remember to select 'More Info' and then press [Run anyway] button).

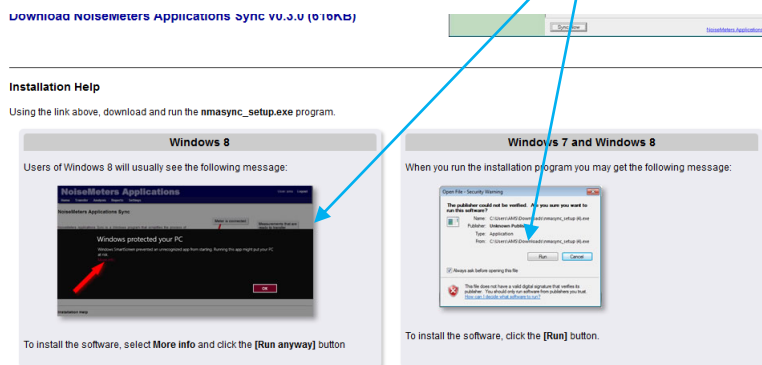

4 Make sure your CEL24x or CEL62x Sound Level Meter is connected to your PC via a suitable USB input socket using the cable provided. The following screen should be displayed. You can select the measurements you want to transfer (by unchecking the ones you dont' want and then press the sync now button to download / transfer your measurements.

